

从这里开始 **START HERE**

Microsoft® Windows®XP

Designed for

Windows 98, ME, 2000,



Windows 用户: 依次执行每步操作。在 未要求连接 USB 电缆之前,请勿进行

请仔细核对盒内物品及系统要求。

Make sure you are using the


Windows users: Follow the steps in order. Do not connect the USB cable until instructed to do so.


See your box for exact contents and system requirements.



Windows 桌面


Windows desktop






- Turn your PC on and wait for the Windows desktop to appear.
- Close any open programs, including virus-checking programs.



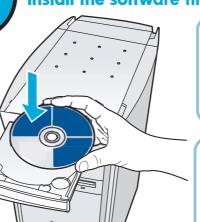

(1) 插入驱动光盘。



- Insert the driver CD.
- Follow the onscreen instructions. Click "English" then click "software

此时不要连接 USB 电缆。请等待 软件安装文件。该操作在速度缓慢 的计算机中最多需要 20 分钟。当 出现右边的画面时请继续步骤 3。

Do not connect the USB cable at his time. Please wait while the software installs files. This can take up to 20 minutes on slow PCs. When you see the screen to the right, continue to step 3.



如果插入光盘后, 计算机屏幕 无任何显示,请在光盘中搜索 setup.exe 并双击该文件。

If nothing appears on your computer screen after inserting the CD, search for setup.exe on the CD and double-click the


Copyright Lenovo (Beijing) Printed in Malaysia.

贴上前面板贴片(中文用户无面板贴片,请跳过此步骤) Attach the front-panel overlay (Chinese user skip this step)






- 放下进纸架和墨盒的挡板。去除包装。关闭墨盒的挡板。
- **b** 从条形码衬板上取下前面板的贴片。
- Lower the input tray and the print cartridge access door. Remove the packaging. Close the print cartridge access door.
- Remove the front-panel overlay from the barcode backing.
- Raise the lid. Align the overlay with the recessed area on the unit next to the buttons. Press the overlay firmly into place.

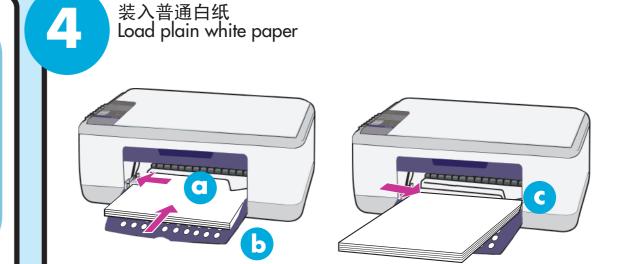


连接 USB 电缆和电源线 Connect the USB cable and the power cord

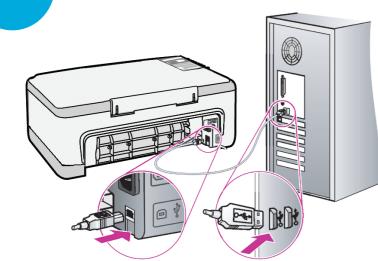

在未看到步骤 2 中出现 的屏幕时不要连接 USB 电缆。请勿将 USB 电缆 连接到键盘或无源集线

> Do not connect the USB cable until you see the screen in Step 2. Do not connect the USB cable to a keyboard or nonpowered hub.

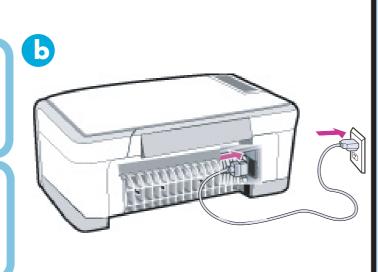

打开电源 Turn on your M8XX


The On light button turns "电源"灯按钮变绿。这 green. This may take a few 可能要花几秒钟时间。 seconds.

插入墨盒 Insert the print cartridges




向下拉墨盒挡板。等待墨盒

Pull the print cartridge access door down. Wait for the print carriage to move to the center.

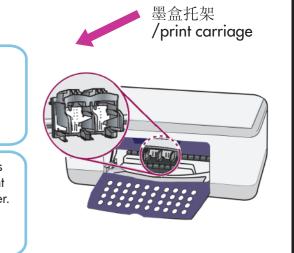

插入墨盒(续) Insert the print cartridges (continued)

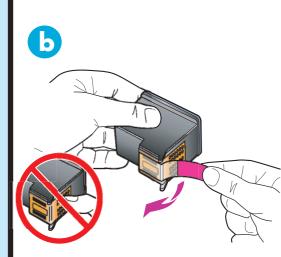

上撕下透明胶带。请勿按触金

色触点或重新贴上墨盒胶带。


Use the bright pink pull-tab to remove the clear tape from the

the cartridges.

print cartridges. Do not touch the gold-colored contacts or re-tape

拉动亮粉红色拉伸胶条从墨盒上撕下诱用吃进一生气


- 按如图所示的方法握住黑色墨盒, 使墨盒型号面朝 上。将墨盒倾斜少许插入墨盒托架的右侧。请参阅 墨盒挡板上的说明。
- 用力按压直到黑色墨盒滑动到位。
- Hold the black print cartridge with the model type on top. Slide the cartridge at a slight angle into the right side of the print carriage. See the instructions on the print cartridge access door.
- Press firmly until the black print cartridge snaps

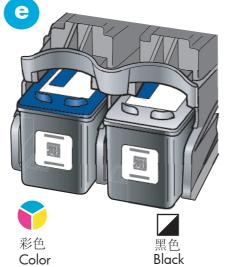

一 对彩色墨盒重复步骤 C 和 D。确认 两个墨盒都完全锁定到位。


Repeat steps C and D with the color print cartridge. Make sure both

cartridges are secure.

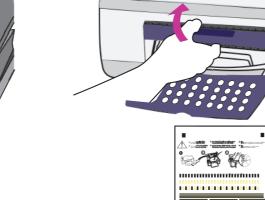

- 关上墨盒挡板。将打印出墨 盒校准页。这可能要花一分 钟时间。请在步骤 8 中使 用该页。
- Close the print cartridge door. A print cartridge alignment page prints. This may take up to a minute. Use this page in step 8.

校准墨盒 Align print cartridges

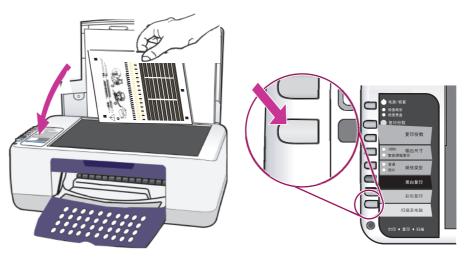

为取得最好打印质量, 请执行 以下步骤:

- 每 将页面正面向下放在左前角。
- **b** 关上盖子。
- c 按下"扫描至电脑"按钮。
- d "电源"灯停止闪烁后,校 准完成。丢弃或回收该页。

For best print quality, follow these steps:

- Place the page face down at the front left corner.
- Close the lid.
- Press the **Scan to PC** button.
- After the ON light stops blinking, alignment is complete. Discard or recycle the page.

完成软件安装 Finish software setup

等待屏幕上出现绿色对勾标记后再进 行后续操作。如果屏幕上出现红色的 "X",请按 Readme 文件中的提示

Look for the screen with the green checkmark, and then continue. If you see the screen with the red "X", follow the instructions in the



试试 Lenovo M8xx Try the Lenovo M8xx

祝贺您! 您现在可以使用 了。双击"联想多功能-体机管理中心"图标开始。

Congratulations! You are now ready to use the Lenovo M8xx. Double-click Lenovo MFP Solution Center icon to get started.

确认"联想多功能一体机管理中心" 窗口中有五个图标。 如果不是,请参阅参考手册。 Make sure there are five icons in

the Lenovo MFP Solution Center

If not, see the reference guide